


SITE SPECIFICATIONS

for the

Kodak MINILOADER 2 PLUS

 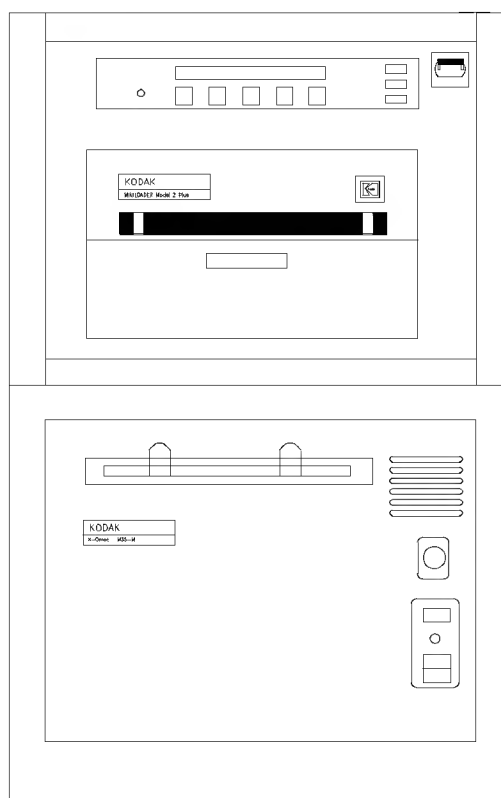


Use this Publication for:-

MINILOADER 2 Plus Model Stand-alone (SV code 3236), MINILOADER 2 Plus Model M35-M (SV code 3239)
and MINILOADER 2 Plus Model 480RA (SV code 3240).



HEALTH SCIENCES DIVISION



CAUTION

This equipment includes parts and assemblies sensitive to damage from electrostatic discharge. Use caution to prevent damage during all service procedures.

PLEASE NOTE

The information contained herein is based on the experience and knowledge relating to the subject matter gained by Kodak Ltd. prior to publication.

No patent licence is granted by this information.

Kodak reserves the right to change this information without notice, and makes no warranty, express or implied, with respect to this information. Kodak shall not be liable for any loss or damage, including consequential or special damages, resulting from the use of this information, even if loss or damage is caused by Kodak's negligence or other fault.

CONTENTS

	PAGE
PHYSICAL DIMENSIONS	4
ELECTRICAL REQUIREMENTS	4
ROOM ENVIRONMENT	4
INSTALLATION	5
BUILDING EXHAUST DUCT	5
DIMENSIONS M35-M MODEL	8
DIMENSIONS 480RA MODEL	9
DIMENSIONS STAND-ALONE MODEL	1 0
PUBLICATION CHANGE NOTICE TABLE	1 1

PHYSICAL DIMENSIONS.

MINILOADER ONLY.

Crated (with pallet).	Height:	850 mm	33.5 ins.
	Width:	990 mm	39 ins.
	Depth:	830 mm	32.5 ins.
	Weight -	Gross	134 Kg.
		Net	110 Kg.

M35-M Model Stand assembly etc.

Crated (with pallet).	Height:	1210 mm	43.75 ins.
	Width:	930 mm	53 ins.
	Depth:	840 mm	36.75 ins.
	Weight:	Gross	84 Kg.
		Net	55 Kg.

The pallet and packing is disposable and does not need to be returned.

For the dimensions of the various models, please see the individual drawings on pages SS-8, SS-9 & SS-10.

ELECTRICAL REQUIREMENTS.

European models: 220 Volt Single phase 50/60 Hz 3.2 Amps (Fuse at 5 or 6 Amps).

U.K. models: 240 Volt Single phase 50/60 Hz 3.4 Amps (Fuse at 5 or 6 Amps).

ROOM ENVIRONMENT.

Temperature:	Recommended:	20 °C
	Limits:	16 - 24 °C

Note. There must also be control of overnight temperatures especially in mobile units.

Relative Humidity:	Recommended:	50%
	Limits:	40 - 60%

Film quality may be affected if the unit is operated outside the recommended environmental range.

Operational problems will be encountered if temperature and/or relative humidity are outside the recommended values.

Prolonged exposure to relative humidity above the recommended range may cause the film to multiple load, or to jam in the supply magazine. Long term high humidity will cause corrosion inside the unit.

Lighting: Recommended: 650 Lux
Maximum: 2150 Lux

Floor Gradient: The maximum gradient of the floor on which the M35-M version is installed has to be below 1%. I.E. The floor must not incline more than 1 cm per metre in any direction. The floor must also be clear of any obstructions. If the gradient is greater, or the floor surface has an uneven channel it may not be possible to roll the MINILOADER away from the X-OMAT M35-M PROCESSOR.

INSTALLATION.

1. The site must be properly prepared before the MINILOADER is installed.
2. The MINILOADER 2 Plus was designed to accept 18 x 24 cm and 24 x 30 cm KODAK MIN-R 2 Cassettes and 8 x 10 inch KODAK X-OMATIC Video film holders.
The cassettes require preparation before use. All cassettes require a reflective PATCH on the outside, and MIN-R 2 cassettes require two reflective PATCHES inside.
3. A Customer Equipment Services Representative (ESR) will visit the premises during Kodak's normal working hours to inspect the site where the MINILOADER is to be installed. At that time, it will be determined whether the site has been properly prepared for the equipment installation. The customer will be notified of any areas that require further preparation.

BUILDING EXHAUST DUCT.

IMPORTANT

If the MINILOADER is processor interfaced, it is important that the PROCESSOR has correct venting.

If the venting is not correct fumes will cause corrosion to the MINILOADER.

DO NOT INSTALL THE SYSTEM IF THE PROCESSOR IS NOT CORRECTLY VENTED.

THE NEGATIVE PRESSURE MUST BE MAINTAINED 24 HOURS.

The air flow is correct when the fumes are flowing out of the PROCESSOR through the EXHAUST HOSE.

Before installing, or at the next service call do the following procedure to check that the air flow is correct.

Do the following procedure, using an AIR METER TL 2431 to check the venting is correct:

1. Switch off the PROCESSOR (if already installed).
2. Place the RUBBER HOSE on the centre connection of the AIR METER.
3. Disconnect the EXHAUST HOSE from the X-OMAT EXHAUST DUCT.
4. If a REPLENISHMENT CHECK TUBE ASSEMBLY is available, do steps 5 to 8.

NOTE.

*If no REPLENISHMENT CHECK TUBE
is available, advance to step 9.*

5. Remove the curved end of the REPLENISHER CHECK TUBE part no. 592380 by cutting.
6. Install the tapered end of the REPLENISHMENT CHECK TUBE on the RUBBER HOSE.

IMPORTANT.


The REPLENISHMENT CHECK TUBE must be kept in the centre of the EXHAUST DUCT.

7. Move the REPLENISHMENT CHECK TUBE into the EXHAUST HOSE until the end of the TUBE is 30 cm. (12 ins.) from the end of the EXHAUST HOSE.
8. Advance to step 12.
9. Align a HOSE SUPPORT with the RUBBER HOSE. The ends of the HOSE SUPPORT and the RUBBER HOSE must be together. An example of a HOSE SUPPORT is a straightened wire COAT HANGER.

IMPORTANT.

**The tape should not inhibit the air flow
through the RUBBER HOSE.**

10. Place tape around the HOSE SUPPORT and the RUBBER HOSE at two points.

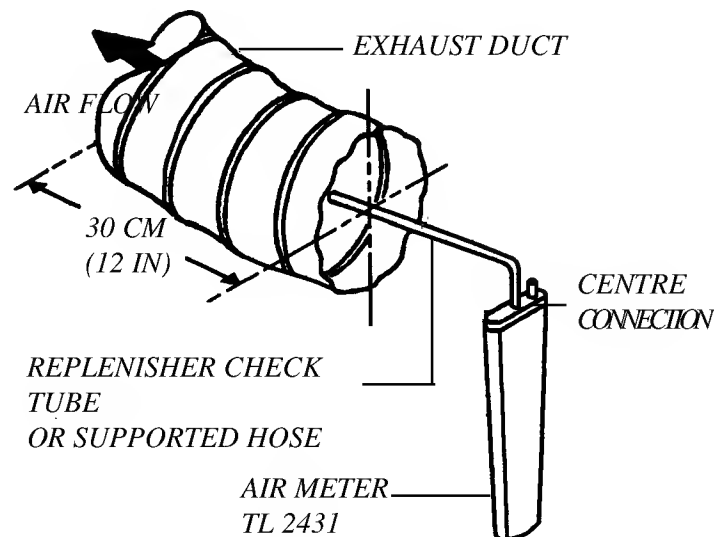

IMPORTANT.


**The RUBBER HOSE must be kept in the
centre of the EXHAUST DUCT.**

11. Move the RUBBER HOSE into the EXHAUST DUCT using the HOSE SUPPORT until the end of the RUBBER HOSE is 30 cm (12 inches) from the end of the EXHAUST DUCT.

12. Hold the AIR METER vertically, and take the average of several readings.
13. Compare the average reading with the figures in the table.

DUCT SIZE	Negative Static Pressure, Water Head	
	MINIMUM	MAXIMUM
75 mm (3 in.)	0.75 mm (0.03 in.)	1.0 mm (0.04 in.)
100 mm (4 in.)	0.25 mm (0.01 in.)	0.5 mm (0.02 in.)

14. Adjust one of the following to obtain the required reading obtained from the table.
 - The DAMPER or FAN in the BUILDING VENTILATION SYSTEM.
 - The clearance on the EXHAUST DUCT.

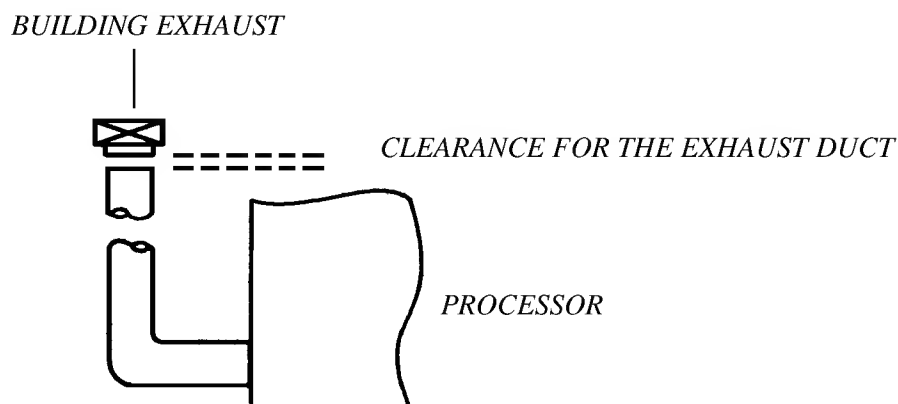

15. If the air flow is still not correct, contact the SALES REPRESENTATIVE and the CUSTOMER to correct the venting.
16. When the air flow reading is within the range in the table, connect the EXHAUST DUCT to the PROCESSOR.


IMPORTANT.

Inform the CUSTOMER that all machine PANELS and COVERS must be installed to maintain the correct air flow.

17. If necessary, install the PANELS and COVERS.

DIMENSIONS AND SERVICE CLEARANCES, M35-M Model.


Clearance required above is 1000 mm

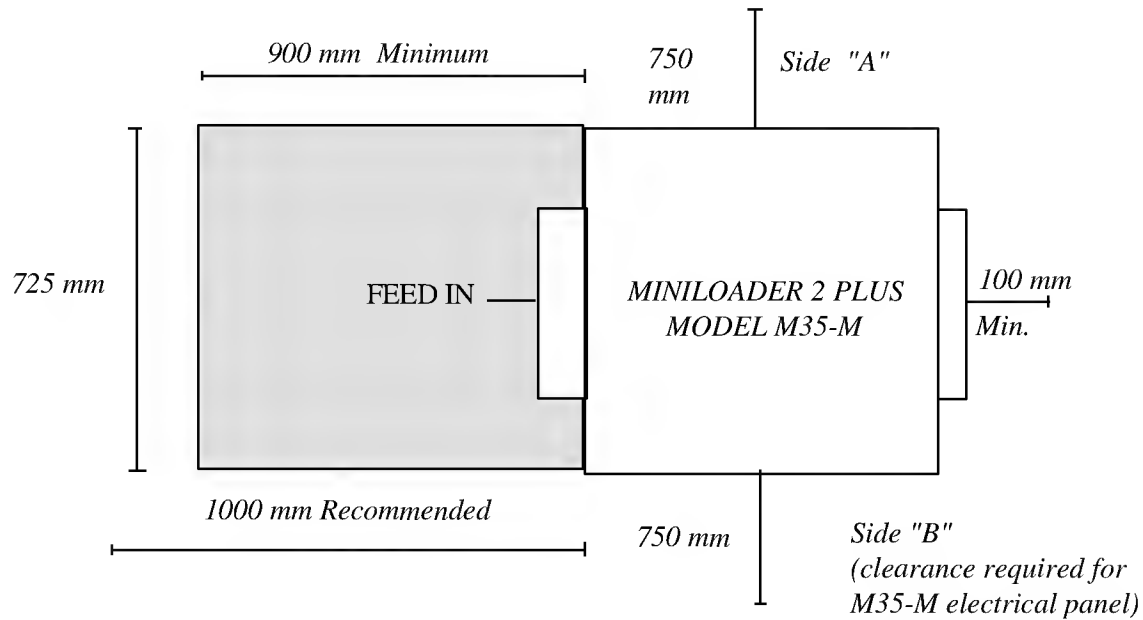

NOTES. If space is at a premium, the clearance on side "A" ONLY may be reduced to 200 mm. The clearance on side "B" may be reduced to 500 mm. The minimum front and rear clearances MUST be maintained.

The MAXIMUM drain height for the M35-M processor in this configuration is 130 mm.


The floor must be within 1% of level (1 mm in 100 mm) within the shaded area and must be free of obstructions for the MINILOADER to be rolled forward for access to the processor.

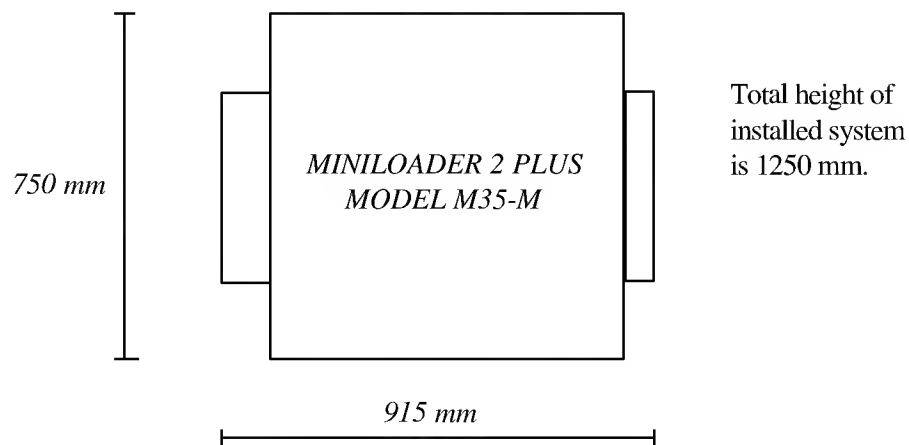

DIMENSIONS AND SERVICE CLEARANCES,


Model 480RA interfaced to M6B / 460RA / 480RA.

Clearance required above is 1000 mm.

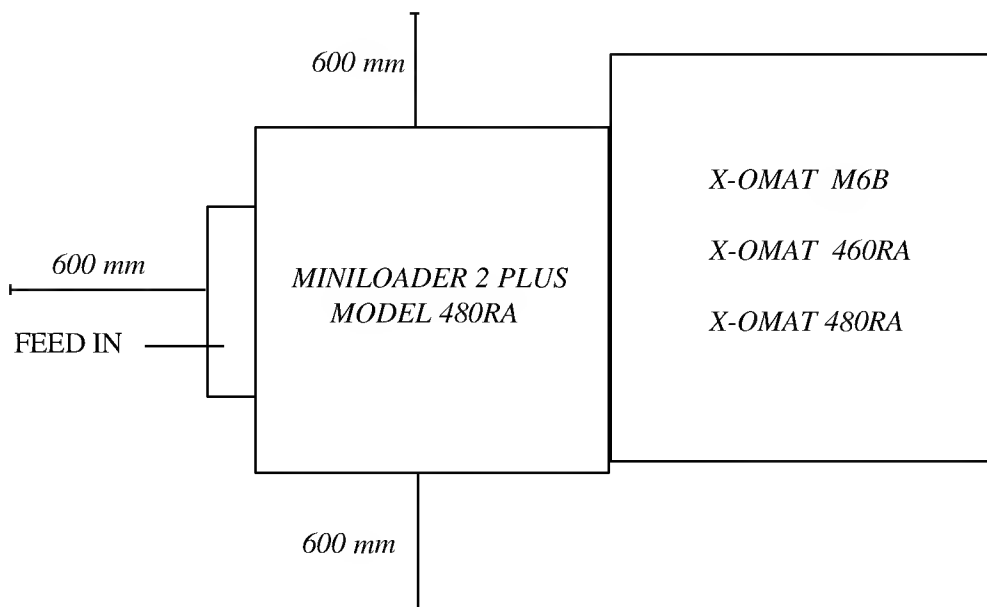


NOTE. If space is at a premium, the clearance on ONE side may be reduced to 150 mm. The clearance at the front **MUST** be maintained.


Normal processor clearances must be observed.

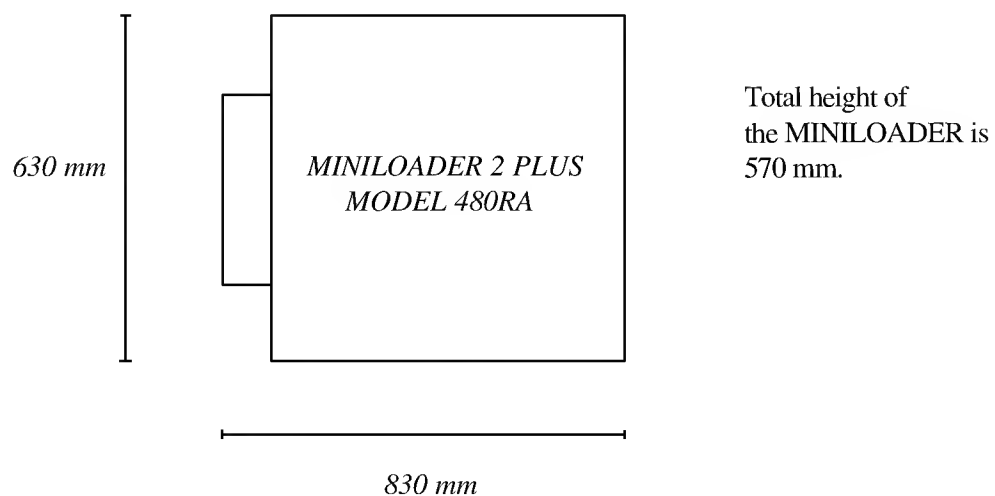

DIMENSIONS AND SERVICE CLEARANCES, Model Stand-Alone.

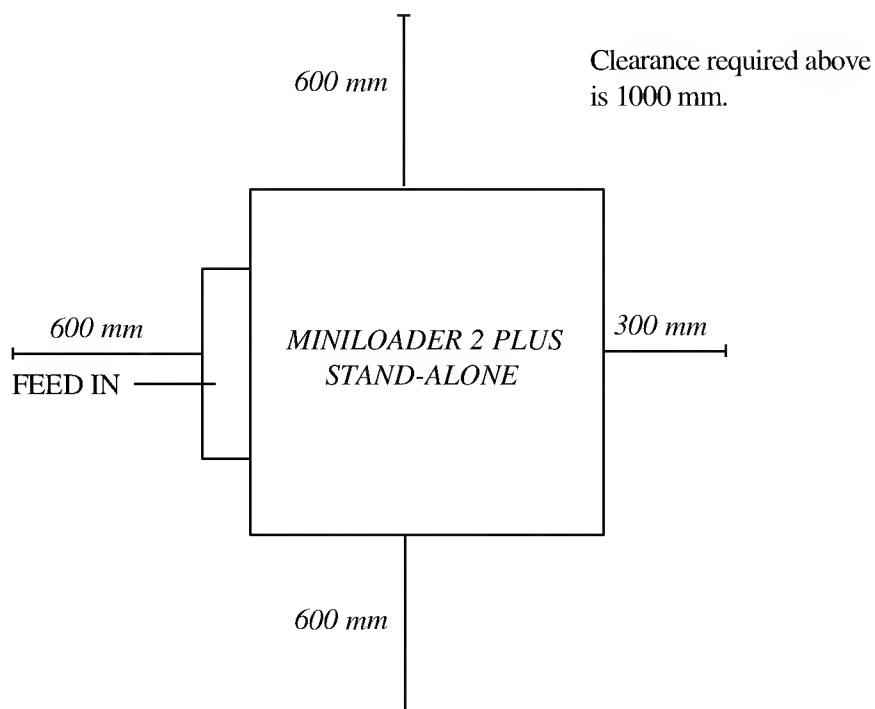

NOTE. If space is at a premium, the clearance on ONE side only may be reduced to 150 mm. The clearances at the front and rear **MUST** be maintained.

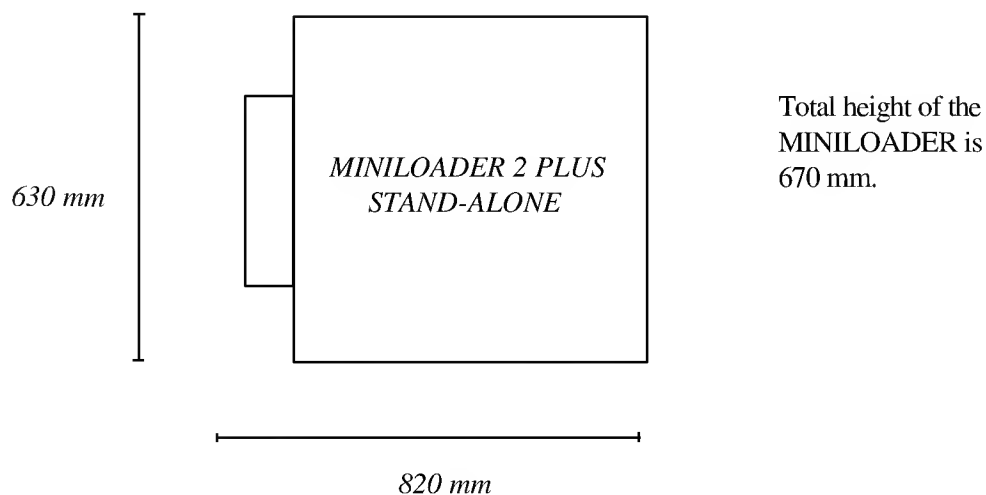

Publication Change Notice Table

Rev. Date	PCN No.	Pub.No.	Affected Pages	Description
December 92	1	30080002	All	Complete updating of all pages.



HEALTH SCIENCES DIVISION
